

SHAD

VOGE 300R '20
VOVR30IF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 262685 x1



2 304201 x4
M6 x 40 DIN 7380



3 303017 x8
Ø6



4 260213 x4
Ø16 Ø9 x 12



5 302021 x4
M6




7 304053 x6
M8 x 30 Din 7380



8 303045 x10
Ø8



9 302024 x4
M8

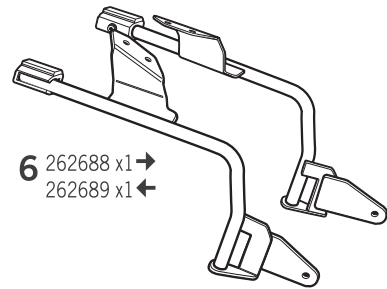

6 262688 x1 →
262689 x1 ←

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D


Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

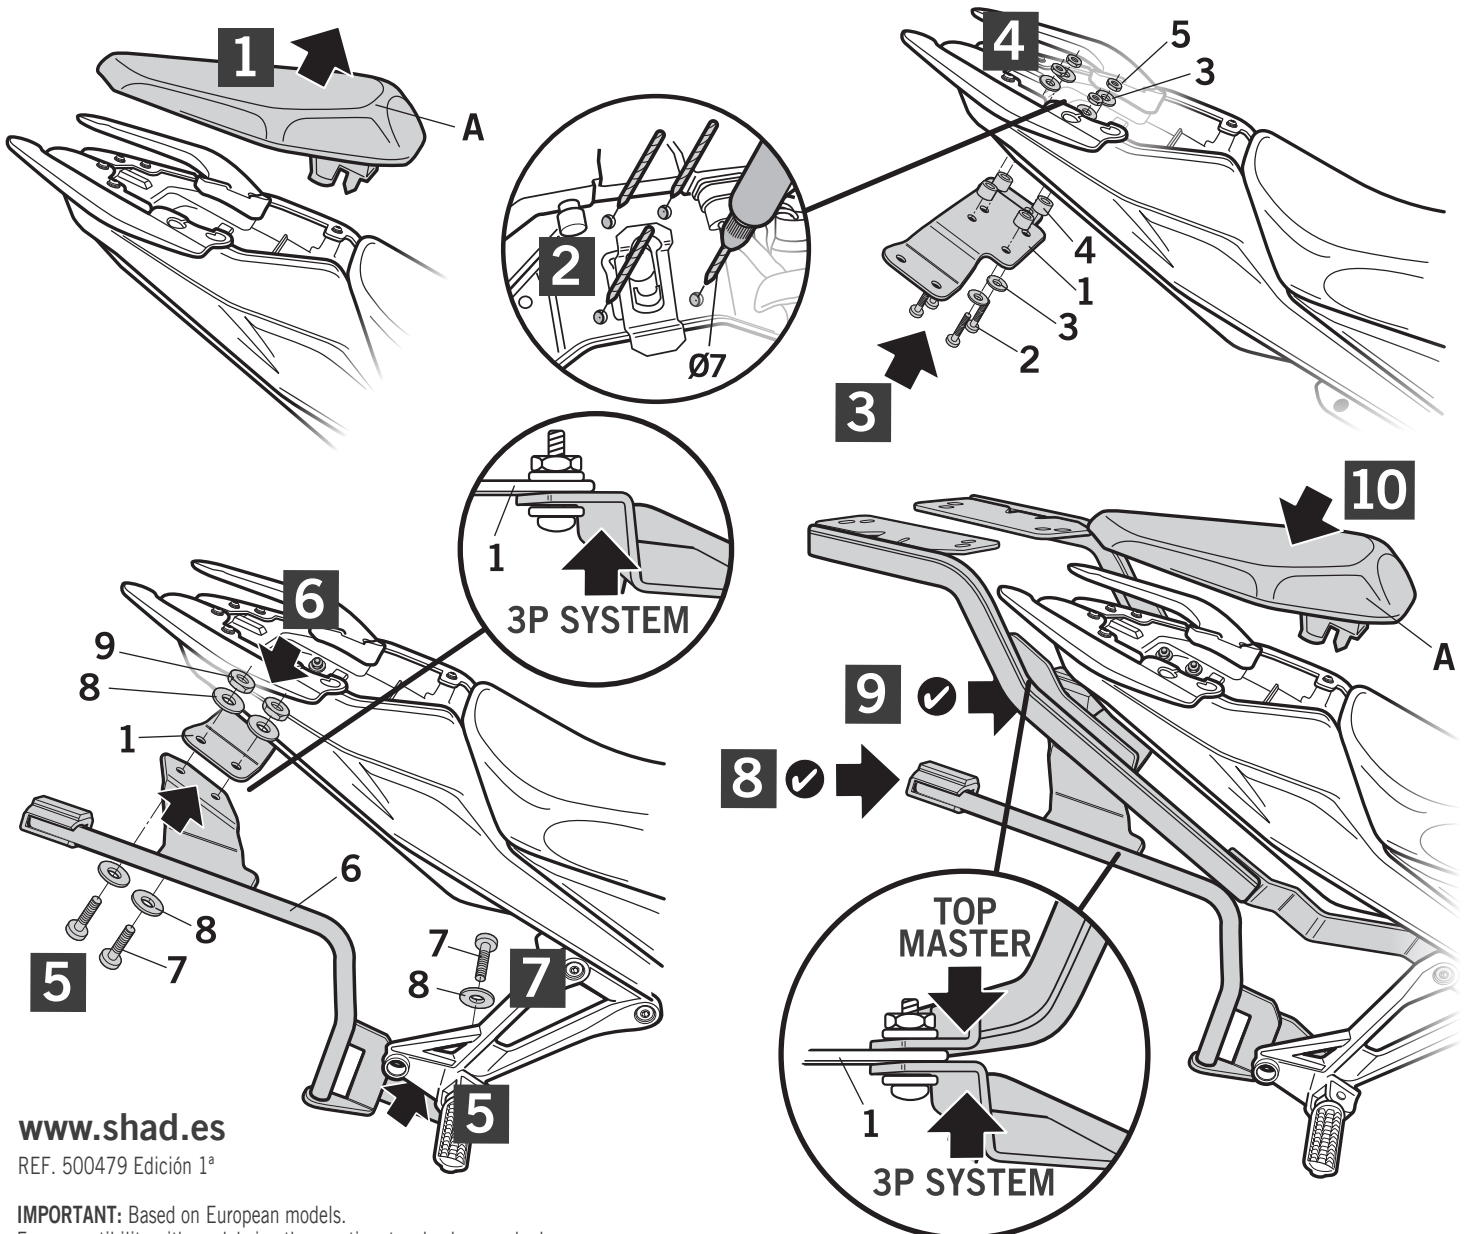

www.shad.es

REF. 500479 Edición 1ª

IMPORTANT: Based on European models.
For compatibility with models in other continents, check www.shad.es