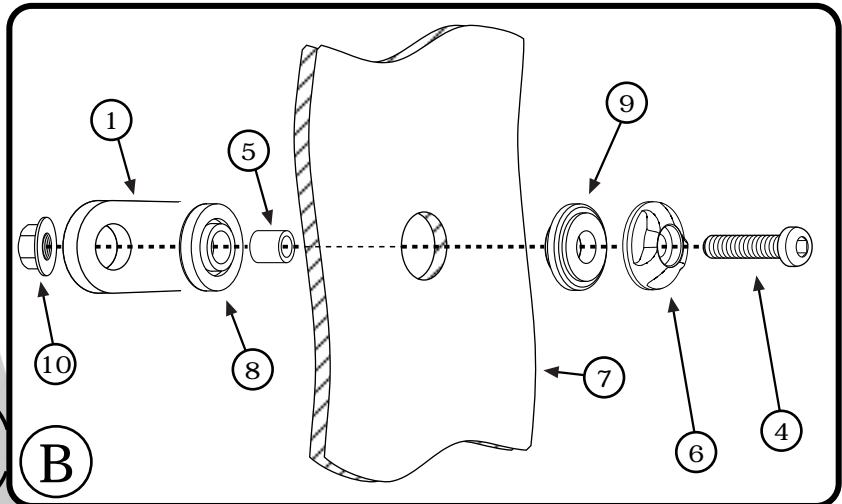
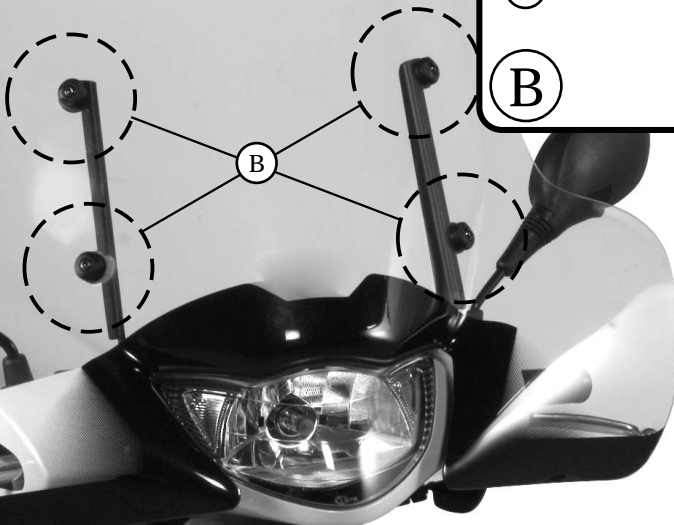
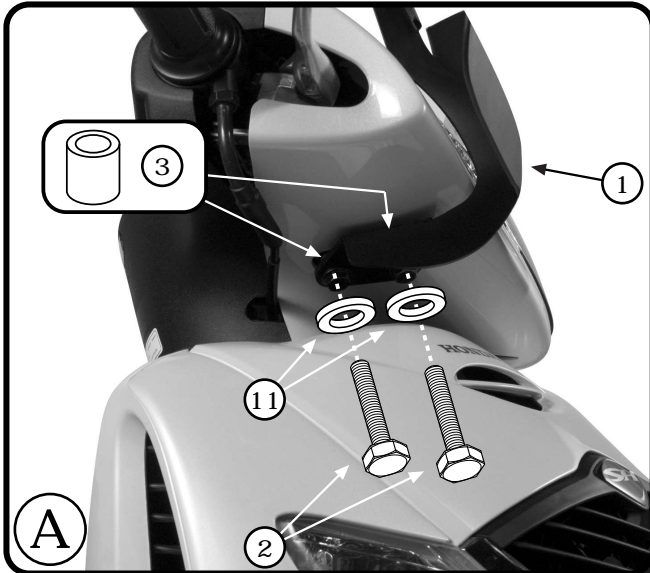


A311A - A311A

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
 ANCLAJE ESPECÍFICO PARA

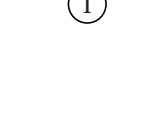








# HONDA SH125i/150i 05/08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCCIONES DE MONTAJE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE



A

B

<p>1</p>  <p>SUPPORTO SUPPORT SUPPORT HALTERUNG SOPORTE</p> <p>Q.TY n.2 (Dx-Sx)</p>	<p>2</p>  <p>VITE TE M8x30mm SCREW VIS SCHRAUBE TORNILLO</p> <p>Q.TY n.4</p>	<p>3</p>  <p>DISTANZIALE Ø16x12mm V700 SPACER ENTRETOISE DESANZSTUECK DISTANCIADOR</p> <p>Q.TY n.4</p>
<p>4</p>  <p>VITE TBEI M6x30mm SCREW VIS SCHRAUBE TORNILLO</p> <p>Q.TY n.4</p>	<p>5</p>  <p>DISTANZIALE Ø10x7mm Foro Ø6mm, V140 SPACER ENTRETOISE DESANZSTUECK DISTANCIADOR</p> <p>Q.TY n.4</p>	<p>6</p>  <p>BOCCOLA DI RITENZIONE Z1861 PLASTIC BUSH DOUILLE PLASTIQUE PLASTIK BUCHSE CASQUILLO</p> <p>Q.TY n.4</p>
<p>9</p>  <p>GOMMINO Z1858 FLANGIATO FAIRLEADER CHAUMARD GUMMI GOMA</p> <p>Q.TY n.4</p>	<p>10</p>  <p>DADO A.B. M6 FLANGIATO BOIT M6 ECROU M6 MUTTER M6 TUERCA M6</p> <p>Q.TY n.4</p>	<p>11</p>  <p>RONDELLA Ø8mm WASHER Ø8mm RONDELE Ø8mm SCHEIBE Ø8mm ARANDELA Ø8mm</p> <p>Q.TY n.4</p>

