


SHAD

BMW R 1200 GS '16
WOGS16IF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 261996 x2



2 303045 x15
Ø8




3 304036 x2
M8 x 45 DIN 7380



4 304028 x6
M8 x 25 DIN 7380

5 261997 x1 →

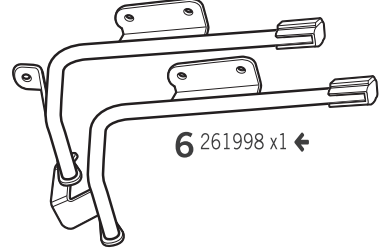


6 261998 x1 ←



7 260596 x1
Ø16 Ø9 x 20



8 302024 x4
Ø8



9 304169 x2
M8 x 50 DIN 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

