




BPA Slack Setter Tool, make sure the chain slack is adjusted as instructed in your motorcycle owner's manual.

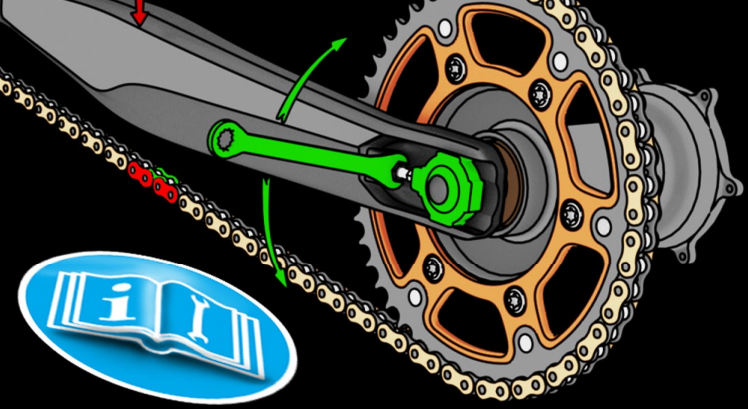


2. Mount the tool with the bushings on chain's inner links.

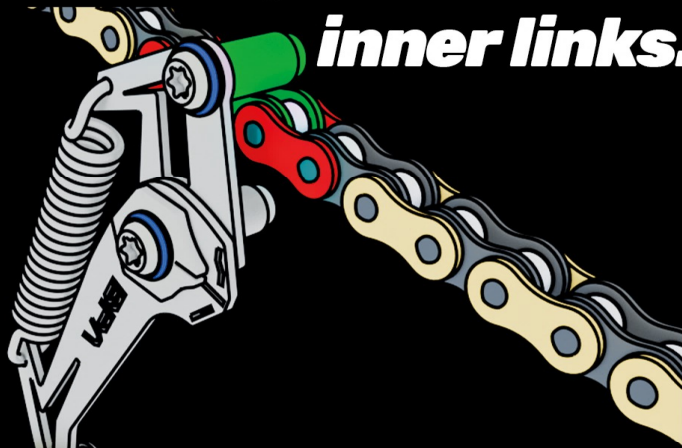


3. Pull by the handle and secure the handle bushing over the chain

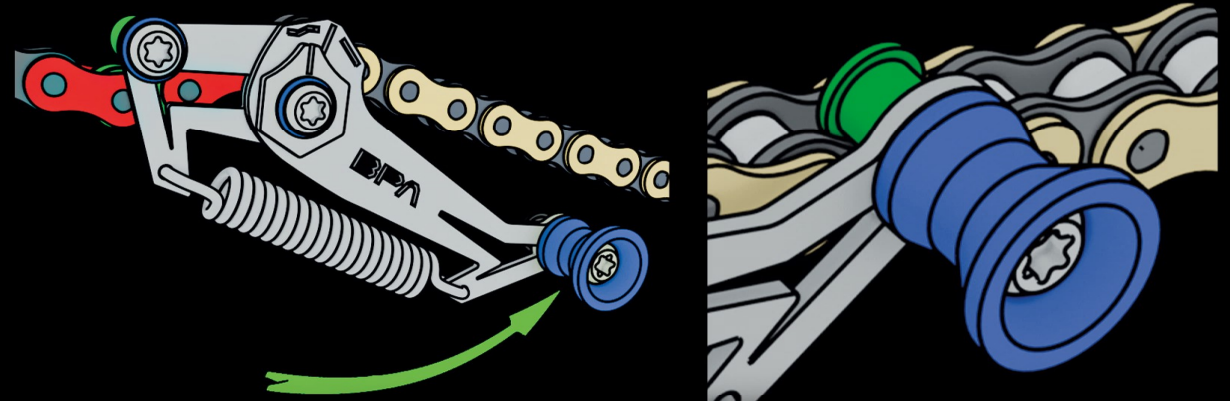


4. LOOSEN the middle bolt

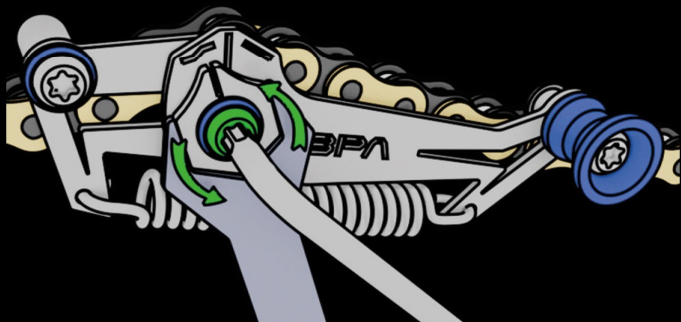


5. ALIGN the OK marks

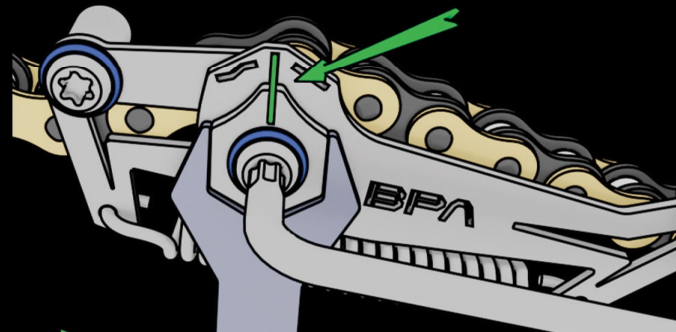

6. TIGHTEN the bolt

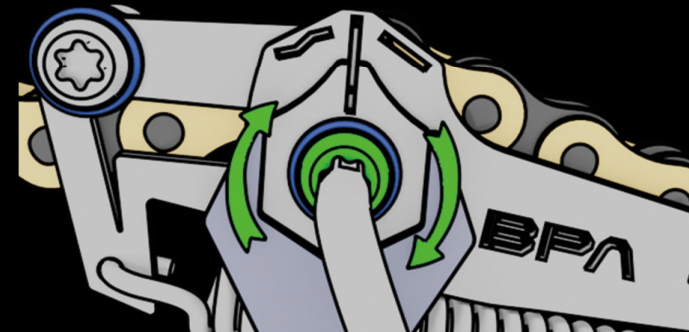

1. Mount the tool with the bushings placed on the chain's inner links.

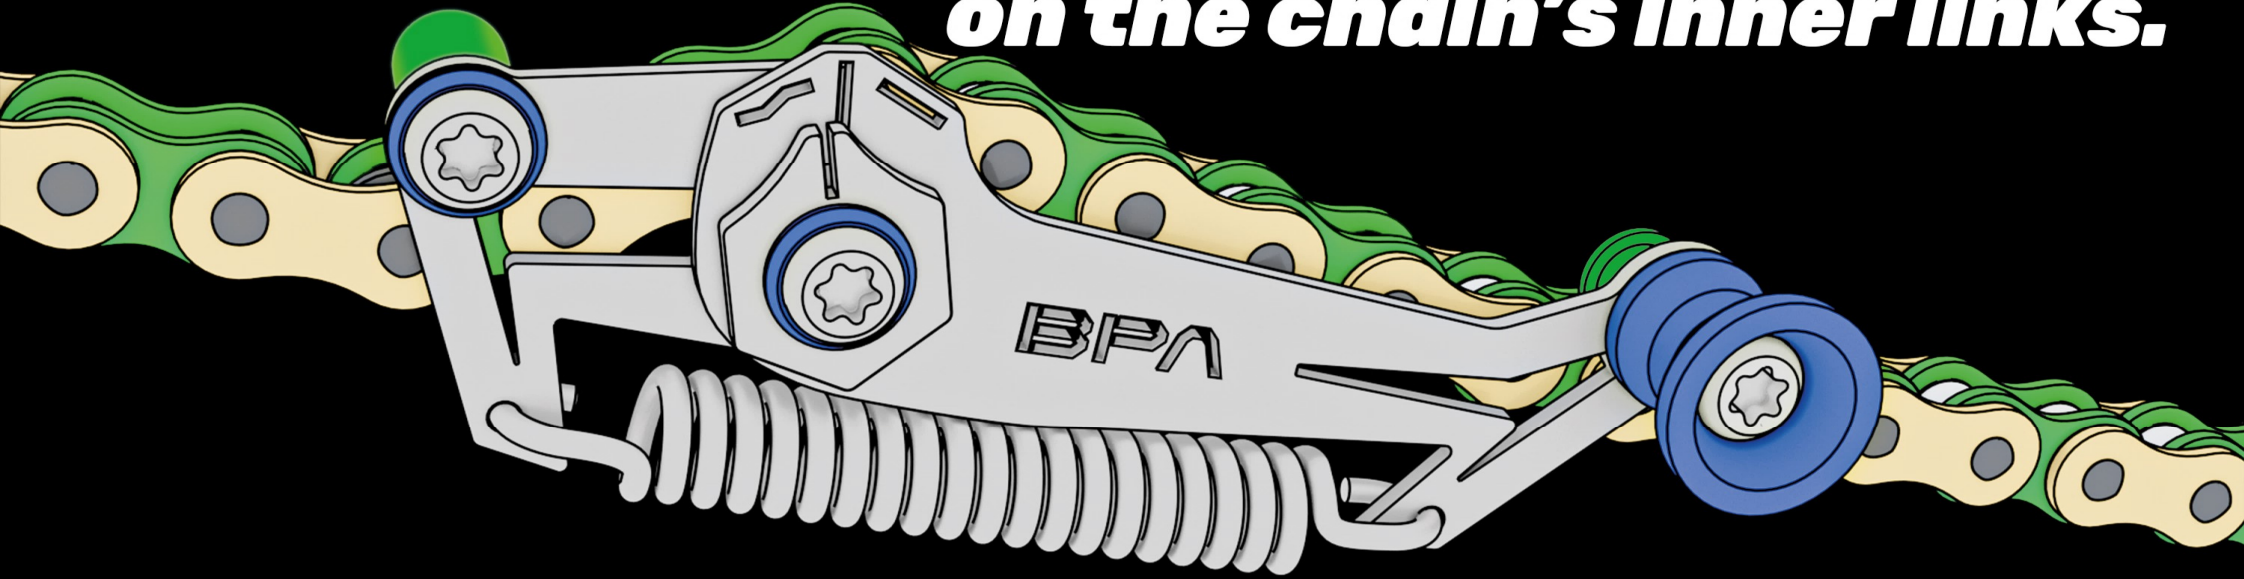


2. Check the marks.



Loose




OK

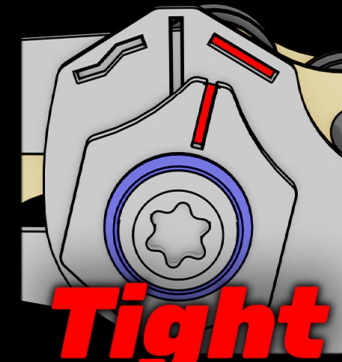

Tight

3. Adjust the Chain Slack until the **OK marks are aligned**

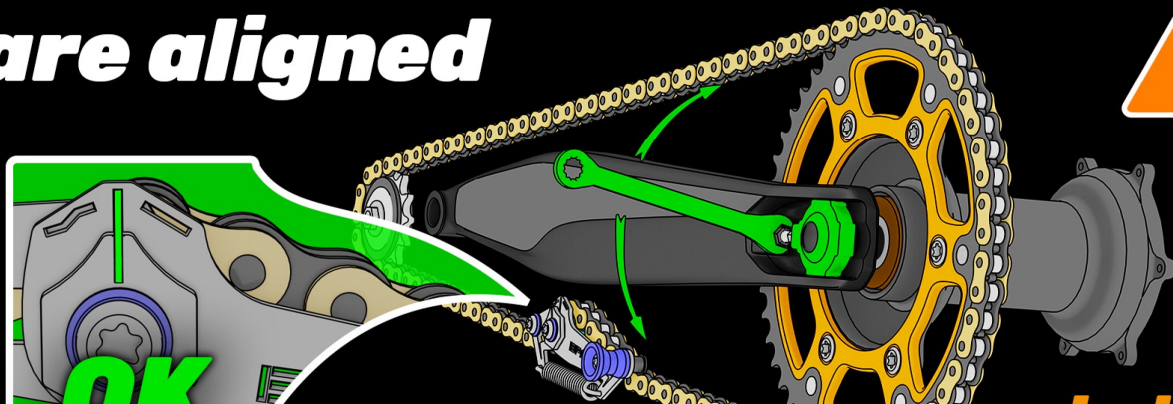

To keep the wheel in alignment make sure you turn the adjusters the same amounts on both sides.