



# INSTALLATION INSTRUCTIONS

Part Number BM-1204

**This filter fits:** SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Filtercharger® seals properly.

## INSTALLATION

1. Remove the stock air filter.
2. Carefully clean the air box base and the intake snorkel sealing surfaces.
3. Apply a thin layer of the provided K&N Sealing Grease to the K&N Filtercharger®. (Fig. 1)  
**Note:** This will help with the installation of the intake snorkel.
3. Install the K&N Filtercharger® into the air box.
5. Install the intake snorkel.  
**Note:** It may be necessary to “rock” the intake snorkel from left to right while pushing down. (Fig. 2 and 3)
6. Reinstall both clips that secure the intake snorkel to the air box. (Fig. 4)

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

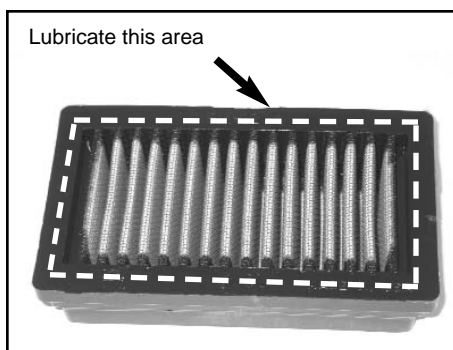


Fig. 1



Fig. 2

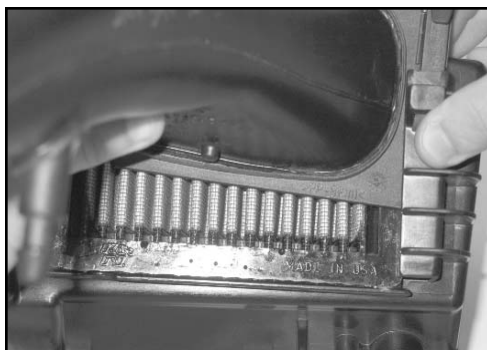


Fig. 3



Fig. 4